




LABORATORY LINES

COLOR LIGHT BOX



Kalstein®

A different accompaniment, at your service

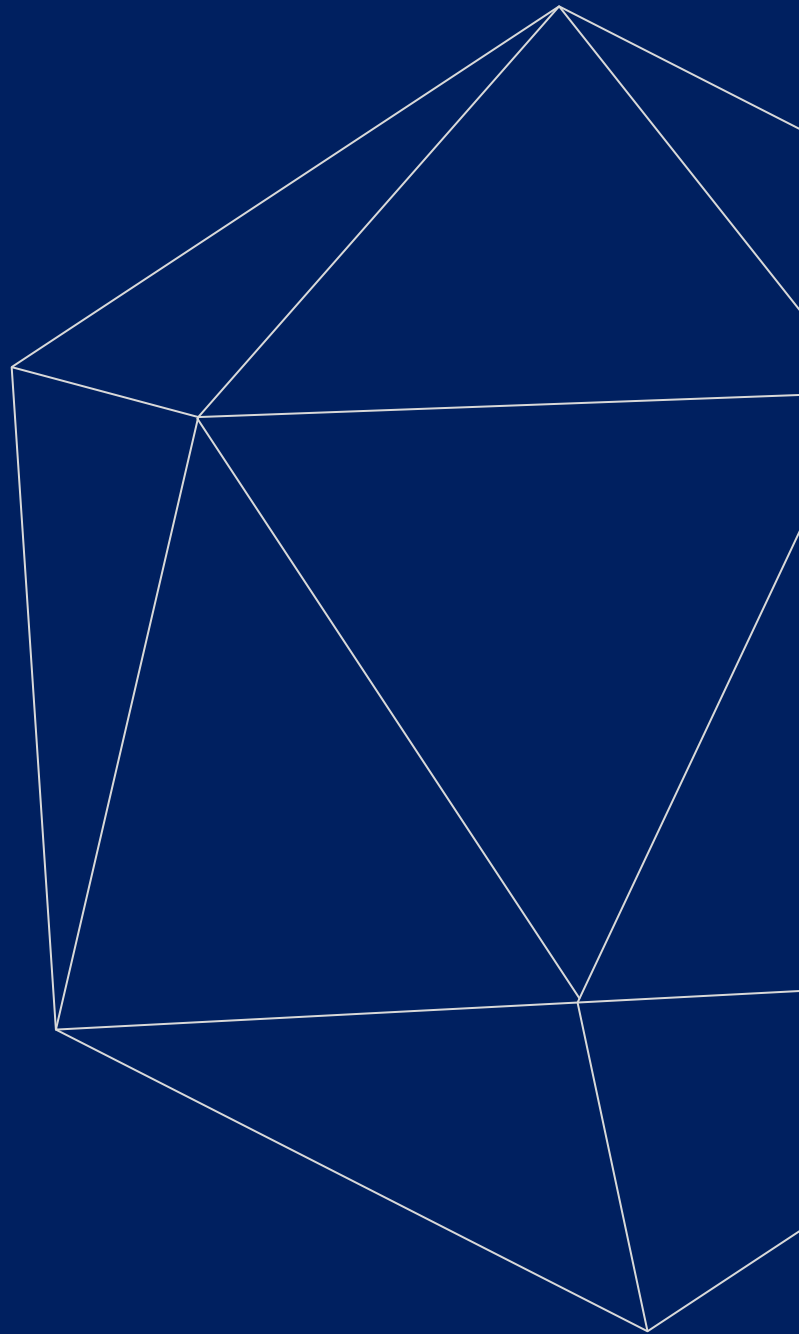

OUR SERVICES

Benefits and Support

In Kalstein France, we take care of the full satisfaction of our customers, that is why we provide value-added services of the highest level based on our experience.



Online Inductions and Trainings

In any part of the world, receive your induction or training from our specialized team of engineers



Quick Response

Our work team is always available to response all your consults or questions, in order to support you in any situation.



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



Technical Support

Enjoy of personalized advice for the correct preventive and corrective maintenance of your equipment, thanks to Kalstein's manuals and articles, special catalogues and video tutorials.



Delivery Logistics

We take care of all the necessary logistics for the dispatch of your goods, whether is by sea, land or air.



Kalstein Worldwide

With more than 25 years growing with our customers, Kalstein's multiformat and modern content, is now present in more than 10 countries and increasing.



Color Light Box Model YR05524 // YR05529



Product Description

YR05524 // YR05526 color light box can be applied to the industries that need to perform color difference testing as follows: as the premiere designer and manufacturer of color matching box instrument products for the Graphic arts, Photographic, Textile, Dyeing, Packaging, Printing, Leather, Inks, Knitwear, Plastic, Automotive and Ceramics industries. YR05524 // YR05526 color light box can accommodate up to 4 light sources. The consistency of the light sources in all Tilo Color Matching Cabinet gives excellent viewing conditions for reliable colour critical decisions under consistent lighting. and chemical board, table Door frames and door panels

Features

1. TILO Color light box render color more accurately. With 4 different light sources(D65, TL84, F, UV), which can detect the metamerism.
2. Meets or exceeds major international standards for visual color evaluation including: ASTM D1729, ISO3664, DIN, ANSI and BSI.
3. Easy to operate by using individual switches for each light source.
4. Elapsed time meter for tracking optimal lamp replacement.
5. Automatically alternating among light sources.
6. No warm-up time or flickering which insures quick and reliable color judgment.
7. Economic power consumption and low heat generation for high light efficiency.
8. The dimension can be made by customized.



#Letsgivemore ♥

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
Optimum Business Center 450 Rue Baden Powell,
• 34000 Montpellier, France.
Tél: +33 467158849 / +33 680760710/ +33 663810023
<https://kalstein.eu>
KALSTEIN FRANCE, S.A. S



Color Light Box

Model YR05524 // YR05529



Technical specifications

Model	YR05524	YR05525	YR05526	YR05527	YR05528	YR05529
Light source	D65, TL84, UV, F	D65, TL84, UV, F, CWF	D65, TL84, UV, F, CWF, TL83	D65, TL84, UV, F	D65, TL84, UV, A, CWF, TL83	D65, TL84, UV, F, CWF, TL83
Dimensions(W*D*H)	710x405x570 mm	710x405x570 mm	710x530x570 mm	710x405x570 mm	710x530x570 mm	1310x600x800 mm
Inner Size(W*D*H)	680x385x355 mm	680x385x355 mm	680x515x355 mm	680x385x355 mm	680x515x355 mm	1280x590x590 mm
Voltage	220V	220V	220V	220V	220V	220V
Weight	28 kg	30 kg	35 kg	28 kg	35 kg	60kg
Light sources Configuration:	D65	2 PCS	2 PCS	2 pcs	2 pcs	2 PCS
	TL84	2 PCS	2 PCS	2 pcs	1 pcs	2 PCS
	F	4 PCS	4 PCS	4 pcs	4 pcs	6 PCS
	UV	1 PCS	1 PCS	1 PCS	1 pcs	1 PCS
	CWF	NO	2 PCS	2 PCS	NO	1 pcs
TL83	NO	NO	2 PCS	NO	NO	2 PCS
Light sources Specification						
Light Source	Color Light Box Application			Color temperature(k)		
D65	International standard Artificial Daylight			6500		
TL84	Applied to stores in Europe, Japan and China			4000		
CWF	(Cool White Fluorescent) American Standard			4150		
F	"Sun-setting Light Yellow" incandescent light source(imitation of sunset)			2700		
UV	Viewing under ultraviolet light to detect and evaluate optical brighteners or fluorescent pigments			Wavelength:365nm		
TL83	Applied to stores in Europe			3000		



#Letsgivemore

Thanks to your purchase, a donation will be made to a non-profit foundation that fights against breast cancer and helps most vulnerable communities.



All rights reserved © KALSTEIN France S. A. S.,
Optimum Business Center 450 Rue Baden Powell,
• 34000 Montpellier, France.
Titl: +33 467158849 / +33 680760710/ +33 663810023
<https://kalstein.eu>
KALSTEIN FRANCE, S.A. S





 **Kalstein**[®]
A different accompaniment, at your service

#LETSGIVEMORE 

**WITH THE
ACQUISITION
OF A KALSTEIN
EQUIPMENT**

YOU MAKE A CONTRIBUTION TO:



**Fundación
Jacinto Convit**

<https://www.jacintoconvit.org/>



<https://onetreepanted.org>



Humatem

Solidarité et coopération
biomédicale


<https://www.humatem.org/>



**MANIAPURE
FOUNDATION USA**

<https://www.maniapurefoundation.org/>

Articles Kalstein
(Réseaux Sociaux et Sites Officiels)

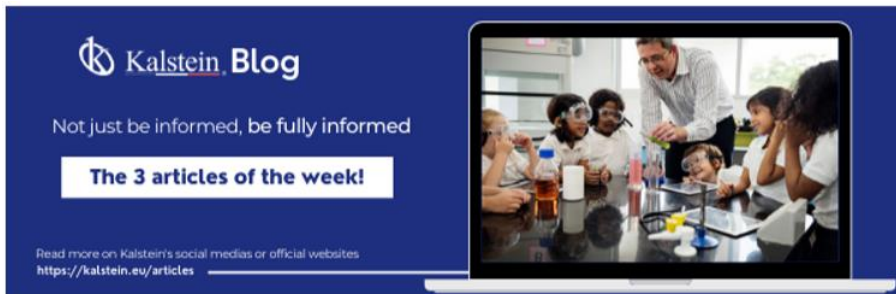

Kalstein Blog
Not just be informed, be fully informed

The 3 articles of the week!

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>



PARIS - FRANCE
HEADQUARTER
2 Rue Jean Lantier
75001 Paris – France

Tlf: +33 (0) 01 78 95 87 89
Cel: +33 (0) 6 80 76 07 10

sales@kalstein.eu
<https://kalstein.net>
<https://kalstein.eu>



1
Read this ARTICLE NOW

How does the climate affect your microscope?

Kalstein Blog

Article of the week:
How does the climate affect your microscope?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>



2
Read this ARTICLE NOW

What is the importance of the laboratory refrigerator?

Kalstein Blog

Article of the week:
What is the importance of the laboratory refrigerator?

Read more on Kalstein's social medias or official websites
<https://kalstein.eu/articles>

Vidéos de formation Kalstein
(Chaîne Youtube et sites officiels)



Kalstein France - Jacinto Convit Foundation / Alliances

23 views • 3 years ago



Kalstein's Microscopes

445 views • 1 week ago

